



Quick Start Guide

Please create you SOFIHUB portal account before beginning set up.
For details please see page 20

Contents

Getting to know your device	3
Charging your device	9
Switching the device ON/OFF	11
What do the lights mean?	12
Activating an SOS Alarm	13
Getting a GPS fix	15
Fall down alarm	16
Making a phone call	17
Silent mode button	18
Specifications and Cautions	19

SOFIHUB Portal

Creating your account	20
Setting your emergency contacts	22
Customise your secure settings	23

Getting to know your device

SECURE — FRONT



Getting to know your device

(Continued)

SECURE — SIDE

Positioning indicator
BLUE



Cellular indicator
GREEN

Call button

Silent mode button

Power indicator
RED

Getting to know your device

(Continued)

SECURE — BACK



Getting to know your device

(Continued)

CHARGING BASE — FRONT



TIP

IMPORTANT: In order for the call 1 button and SOS button on the base station to function correctly you must first pair your secure to your base station.

Press and hold the second button (labelled call 2) on the base station as well as pressing the bottom side button on the secure simultaneously.

You may see the base station LEDs colour change during this process. If pairing has succeeded, you should hear the base station say "Pairing successful"

Getting to know your device

(Continued)

CHARGING BASE — BACK



Loudspeaker

Getting to know your device

(Continued)

 
CHARGING BASE — BOTTOM



USB cable

Charging your device

There are 2 ways to charge your device.

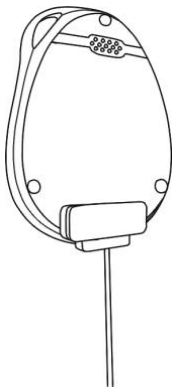


1. Charging by magnetic USB cable

- When placing the magnetic USB cable on the device charging contacts make sure it is positioned correctly.
- The power indicator (red light) should blink when charging and remain solid when fully charged.
- When the device starts charging successfully you will hear an audible voice prompt.

Charging your device

 (Continued)

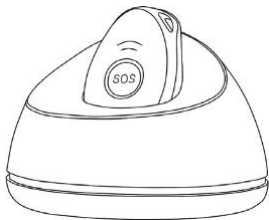

2. Charging by base

- Place the device on the charging base.
- Connect the USB cable from the charging base to the AC adaptor.

The charging base light will glow when charging and turn solid when fully charged.

TIP

For the first time use, please fully charge the battery for around 2-3 hours

 
TIP

The charging base is equipped with a 2000mAh back up battery, which can charge the device when the electricity is off at home or when traveling.


TIP

At 20% it only plays an audible voice prompt.
At 15% it plays an audible voice prompt and sends a text message to the emergency contacts.

Switching the device ON/OFF

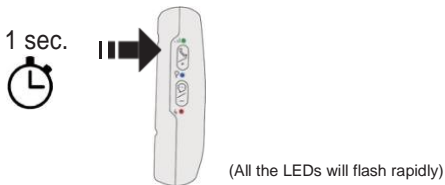

 To turn on the device: press the top side button for 1 second, all the LEDs will flash rapidly. The device can also be turned on automatically by charging via magnetic USB cable or putting it into the docking station.

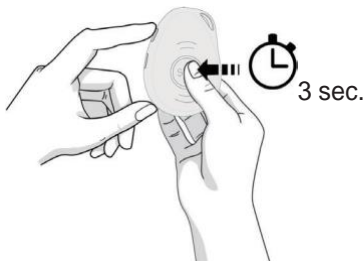

To turn off the device: press and hold the side button and SOS button together for 3 seconds until the LEDs turn off.

What do the lights mean?

● Cellular signal indicator--Green

Green	Light shows a single flash rapidly every 3 seconds	Light shows a double flash rapidly every 3 seconds
Means	The device has a stable Cellular signal	The device is registered to the Cellular network

● Positioning indicator--Blue

Blue	Light shows a single flash rapidly every 3 seconds
Means	The device has no latest location fix


Blue	Light shows a double flash rapidly every 3 seconds	Light Off
Means	The device has latest location fix	The device is not fixing the latest location

● Power indicator--Red

Red	Red ON (solid)	Red shows a double flash rapidly every 3 seconds
State	Device has been fully charged	BLE connected

Red	Red Blinking Quickly	Red Off or blinking slowly
Means	Battery power is lower than 20%	The device is charging

 Activating an SOS Alarm

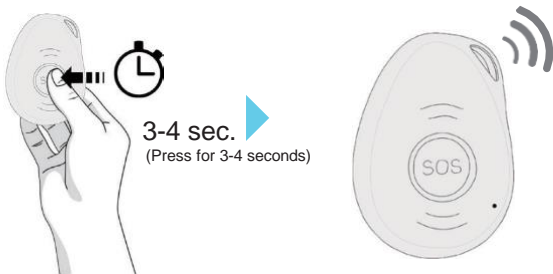

When you need help, press the SOS button for 3-4 seconds till you hear a voice prompt of activating an SOS alarm. This starts the “Help me!” text message sequence to your emergency contacts. Your emergency contacts will be individually called shortly afterwards automatically, until the SOS sequence is stopped.

- If the device fails to connect to the first number, it will call the second number after delay of 15 seconds. In case the second number fails to be connected as well, the system will connect to the third number etc.

Activating an SOS Alarm

(Continued)

Between each call, it will have 10 seconds delay, during this time, user can stop call sequence or prevent a possible false alarm by pressing the SOS button.

Use the side buttons +/- to adjust the sound volume during a call.

TIP

 
Please remember to program emergency contact numbers. It is not mandatory for all three authorized numbers to be set, however a minimum of one must always be set.

TIP

Please be patient during the call sequence. There can be short delays as the alarm calls phones who maybe out of range or delivered to people's voicemail.

Getting a GPS fix

To get an initial fix for the GPS features, use outdoors or near a window so the device can get a fix on the satellites. This could take few minutes according to your environment.

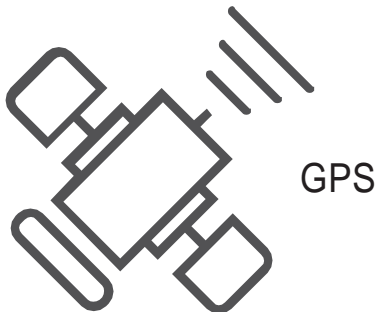

Fall detection alarm

- Fall detection sensitivity can be adjusted and turned on or off via the portal.



Sometimes daily activities (such as sports or dropping your secure) may cause your secure to detect a fall incorrectly and cause a false alarm. You can always cancel the fall alert before your contacts are notified by pressing the SOS button during the initial voice prompt sequence.

TIP

IMPORTANT: It is possible that the secure may not correctly detect a fall down event under certain circumstances. Using the SOS button is critical to get help in an emergency situation. If you have fallen, but do not hear the secure voice sequence activate please press the SOS button.

Making a phone call

- To make a call to your carer, press side call button for 3 seconds and you will hear a beep, and then it will dial and connect promptly.

 


- To end the call, press the SOS button.



Silent mode button

- Double click the bottom side button to turn off voice warnings, double click again to turn on voice warnings.

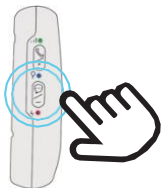

IMPORTANT: Switching off voice prompts will mean that when you activate an SOS sequence, or a fall down is detected your secure will remain silent until your emergency contacts are rung by phone.

When determining whether or not to turn off the voice prompts, please consider your personal situation and whether or not it would be appropriate to switch these prompts off.

SOFIHUB recommends that elderly users of the secure always have their voice prompts turned on. Turning off voice prompts may be confusing for the elderly, for example if a fall is detected and the sequence is activated, the user may not remember voice prompts are disabled and they may proceed to press the SOS button, which in turn would cancel the fall alert sequence (as the secure allows for canceling false positive fall alerts. Please see the “Fall down alarm for more information).”

Specifications:

- Dimension: 61mm*44mm*16mm
- Weight: 40g
- Battery: Rechargeable, 3.7V, 850mAh
- Charging voltage: 5V DC
- Waterproof: IP67
- Locating technology: GPS

 
Cautions:

- Don't use & store the unit in dusty places.
- Don't put the unit in overheated or over cooled places.
- Clean the unit with a piece of dry cloth. Don't clean in chemicals, detergent.
- Don't disassemble or refit the unit.
- Using other batteries will cause unwanted situation.



Setting up your account


You can access the **SOFIHUB portal** through the “portal” tab on the menu on the SOFIHUB website: **sofihub.com**

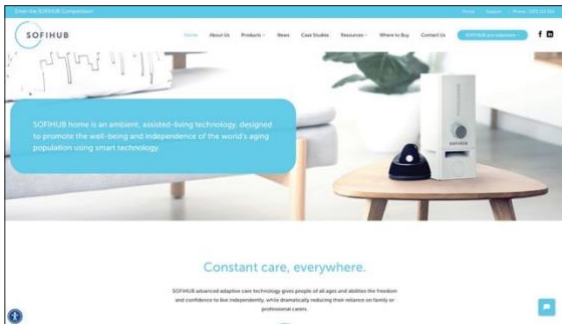


or via direct URL:
portal.sofihub.com

SOFIHUB portal (Continued)

To create your **SOFIHUB portal** account:
Click “Create Account” and follow the prompts.

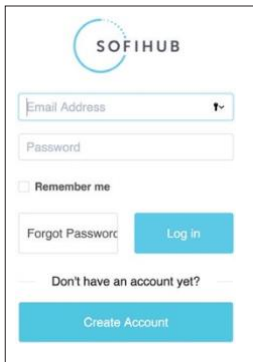


The screenshot shows the SOFIHUB login page. At the top is the SOFIHUB logo. Below it are two input fields: "Email Address" and "Password". There is a "Remember me" checkbox. Below these are two buttons: "Forgot Password" and "Log in". At the bottom, there is a link "Don't have an account yet?" and a large blue "Create Account" button. A blue arrow points from this button towards the next screenshot.

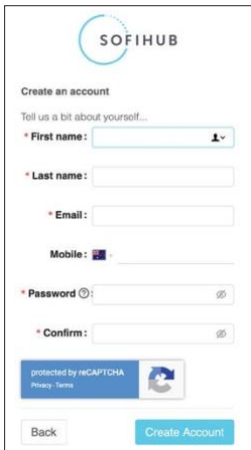

The screenshot shows the SOFIHUB account creation page. At the top is the SOFIHUB logo. Below it is the heading "Create an account" and the text "Tell us a bit about yourself...". There are several required fields marked with an asterisk: "First name", "Last name", "Email", "Mobile" (with a flag icon), "Password" (with an eye icon), and "Confirm" (with an eye icon). At the bottom left, there is a "protected by reCAPTCHA" badge with links for "Privacy" and "Terms". At the bottom right, there is a "Back" button and a blue "Create Account" button.

Setting your emergency contacts

 Once your **SOFIHUB portal** account is set up using the unique details of your device, go to the settings tab in the menu to set your emergency contacts and invite carers.

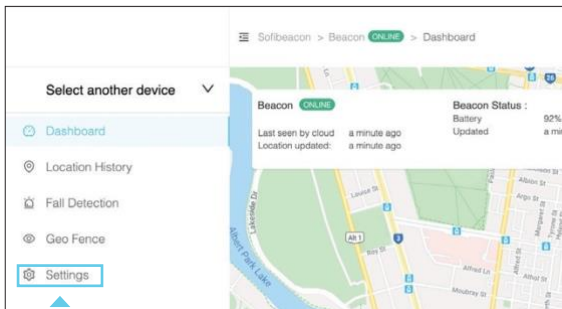

Customise your secure settings

You can customise your secure settings in the portal menu:

Dashboard

Shows overview of the secure's location and status.

Location History

Access information on the secure's location history.

Fall Detection

Toggle Fall Detection 'ON' and select your secure's desired sensitivity on the scale.

Geo Fence

Set your secure's geo fence perimeter. You will receive alerts when the secure's location moves outside of the set area.

For more information or assistance please email: info@sofihub.com

Warning: Please keep the IMEI
(International Mobile Equipment Identity)
somewhere safe for your records



203 Drummond Street,
Carlton, Victoria 3053

Phone: 1300 110 366

Email: info@sofihub.com